

VersaStack

MW-ST-T-20-22



Installation instruction

Web: www.mwworkstation.com

Tel: +86 13695211636

Mail: robbor@mwworkstation.com

CONTENTS

01
without table



02
with table



VersaStack Without table

 
PARTS SHOW

1



[table legs]

2



[wheel]

3



 
[Connector]

4



[screw]


5



[tool]


INSTALLATION STEPS

1

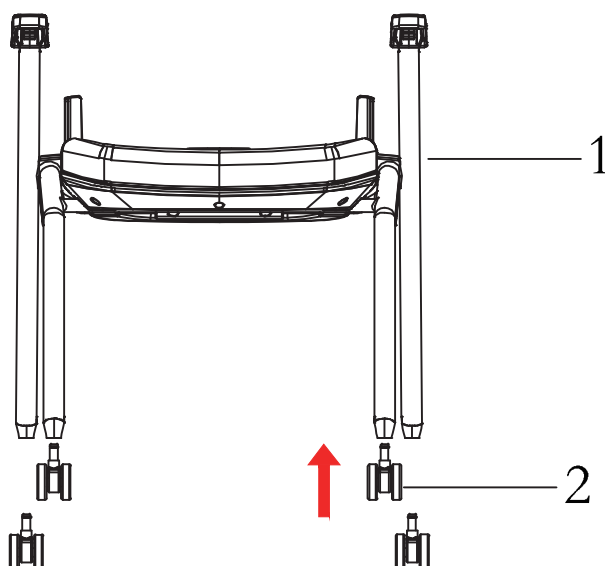


INSTALLATION STEPS

2

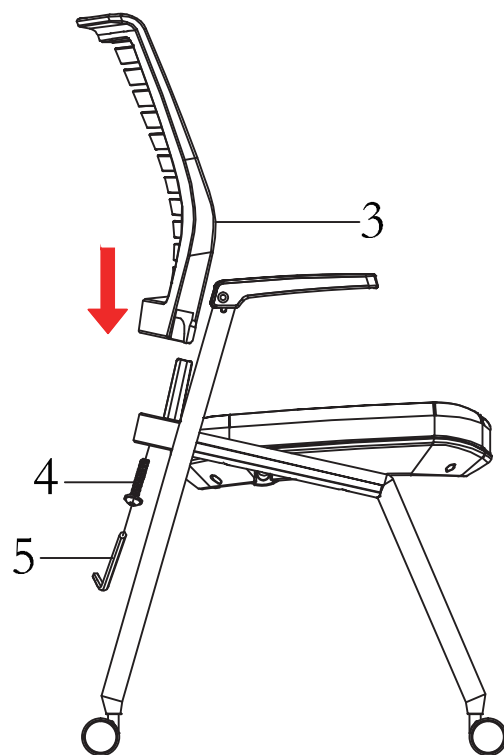

[Install chair back]


3

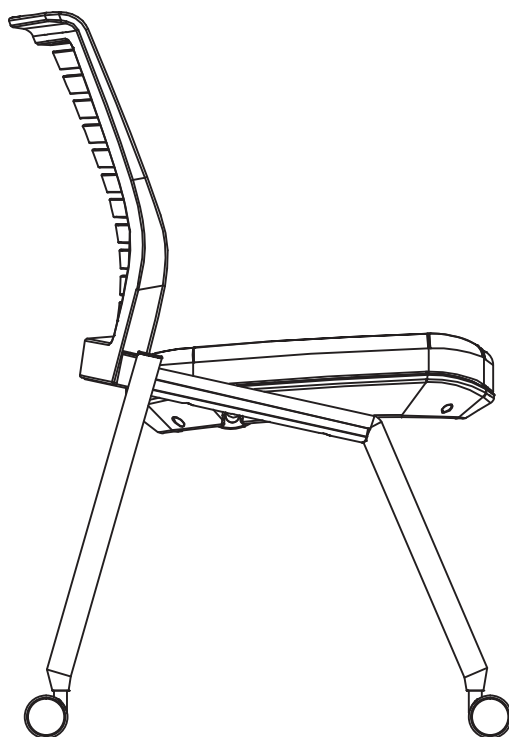

[finished condition]


INSTALLATION STEPS

4

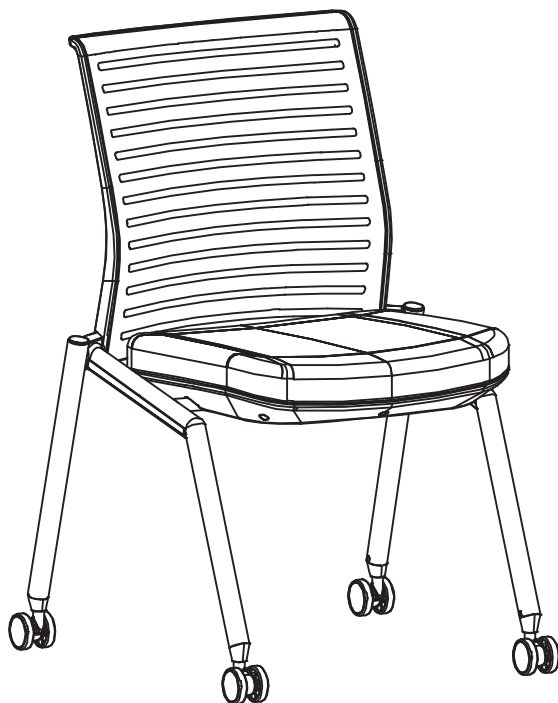

[Finish]








5

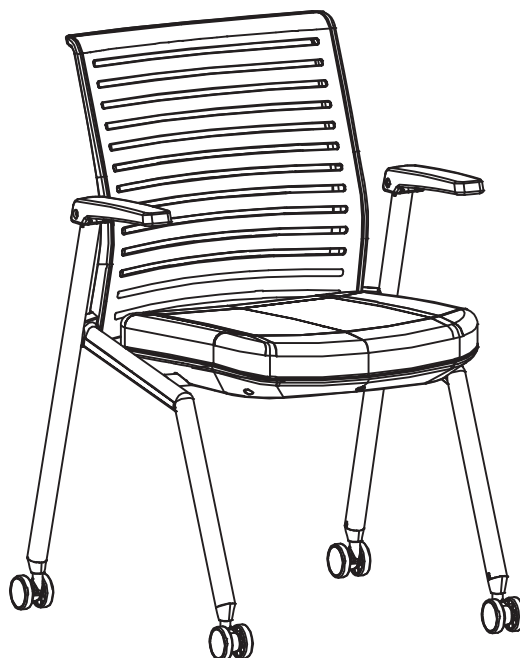


[Install handrails]

VersaStack With table

PARTS SHOW

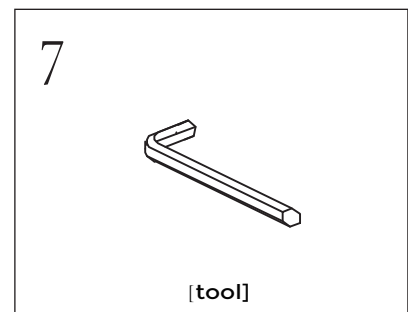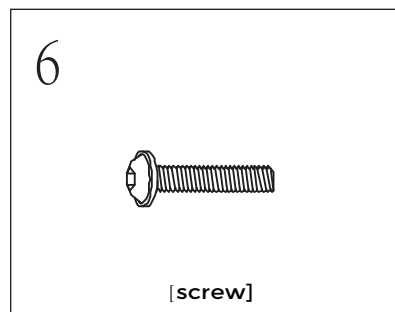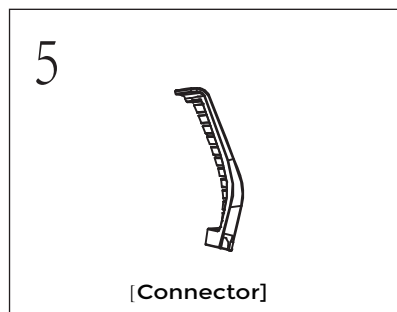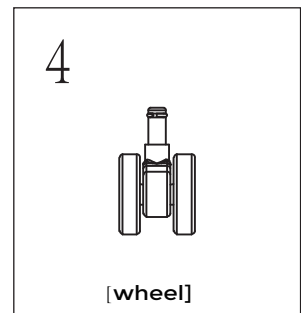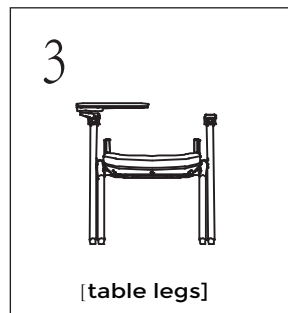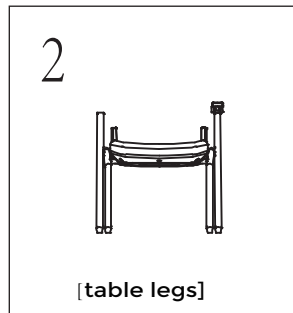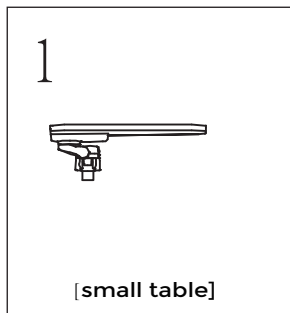


INSTALLATION STEPS

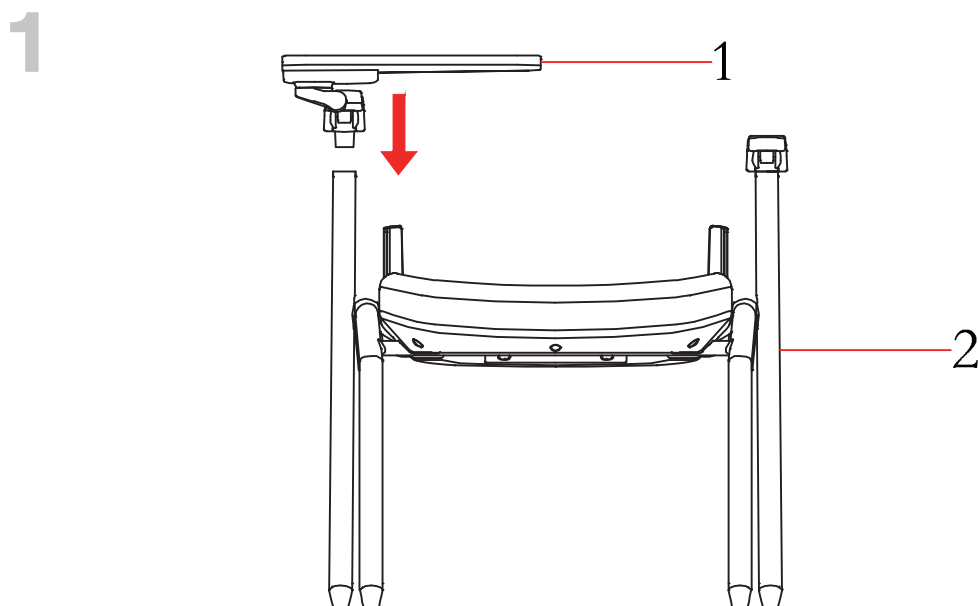


INSTALLATION STEPS

2

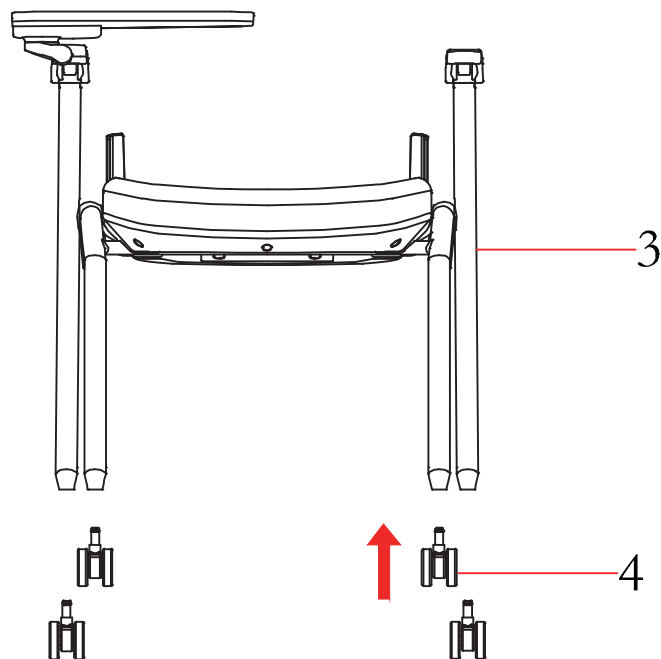

[Install wheels]


3

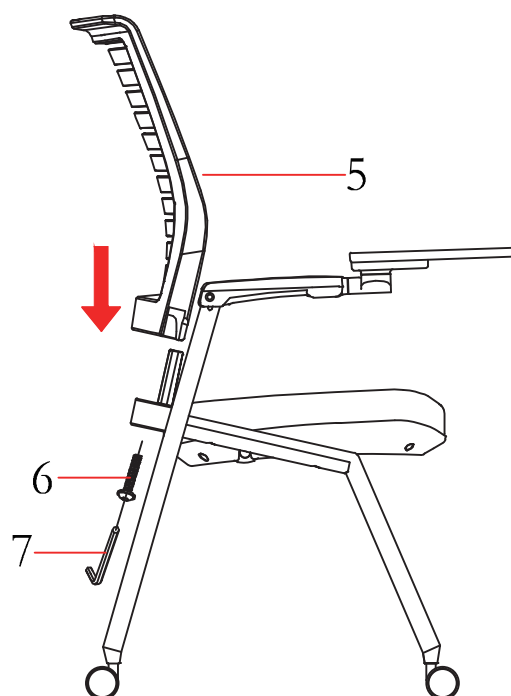

[Install chair back]


INSTALLATION STEPS

4

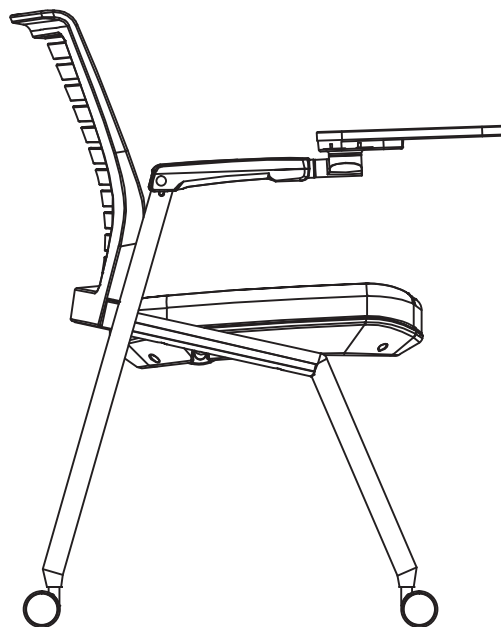

[Finish]

5

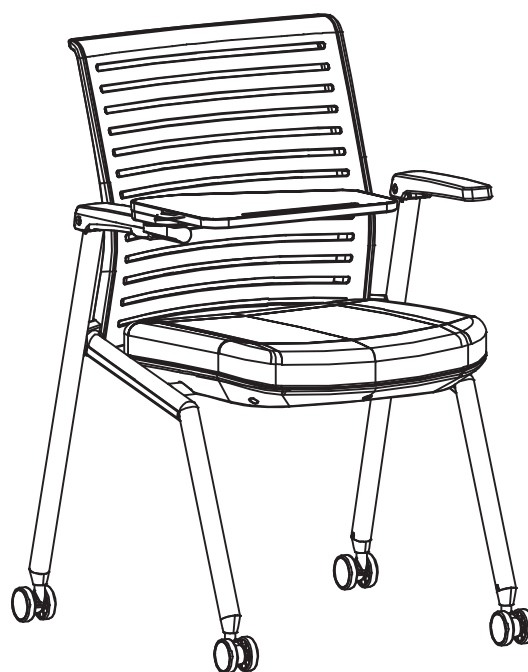

[Finish]



Web: mwworkstation.com

Mail: robbor@mwworkstation.com

Tel: +86 13695211636

WhatsApp: + 86 13695211636

Add: NO.3 Xingye North Road Dawotang Industrial
District Shishan Nanhai Foshan City Guangdong
P.R China



WhatsApp



Facebook



Instagram



Twitter



Pinterest



Linkein



YouTube